PRESSURE SWITCH

Model PS100-2

Pressure type flow switch



PRODUCT DESCRIPTION


The pressure switch model PS100 can be used in fire sprinkler systems. It is suitable for indoor or outdoor service with a NEMA-4/IP66 rating.

TECHNICAL DATA

Model	PS100-2: Two sets of SPDT contact (Form C)
Conduit entrance	Two knockouts provided for 1/2" conduit. Individual switch compartments and ground screw suitable for dissimilar voltages
Enclosure	Cover: Die-cast with textured red powdercoat finish, single cover screw and rain lip Base: Die cast
Pressure connection	Nylon ½" NPT male
Factory adjustment	PS100 operates on decrease at 90 psi (6,2 bar)
Pressure range	25-175 psi (1,7 – 12,1 bar)
Differential	Typical 2 lb. at 25 psi (0,14 at 1,7 bar) 8 lbs at 175 psi (0,55 at 12,1 bar)
Maximum system pressure	300 psi (20,68 bar)
Switch Contacts	Two SPDT (Form C) 10.1 Amps at 125/250VAC, 2.0 Amps at 30VDC
Environmental limitations	-40ºF tot 140ºF (-40ºC to 60ºC) NEMA 4/IP66 Rated Enclosure - indoor or outdoor when used with NEMA 4 conduit fittings
Tamper	Cover incorporates tamper resistant fastener that requires a special key for removal. One key is supplied with each device. Optional cover tamper switch kit must be ordered separately
Service use	Automatic sprinkler NFPA-13 One or two family dwelling NFPA-13D Residential occupancy up to four stories NFPA-13R National Fire Alarm Code NFPA-72

C/Alfoz de Bricia nº4 | P.I. Villalonquéjar | 09001 Burgos (Spain) | Tlfno: +34 947 28 11 08

DIMENSIONS

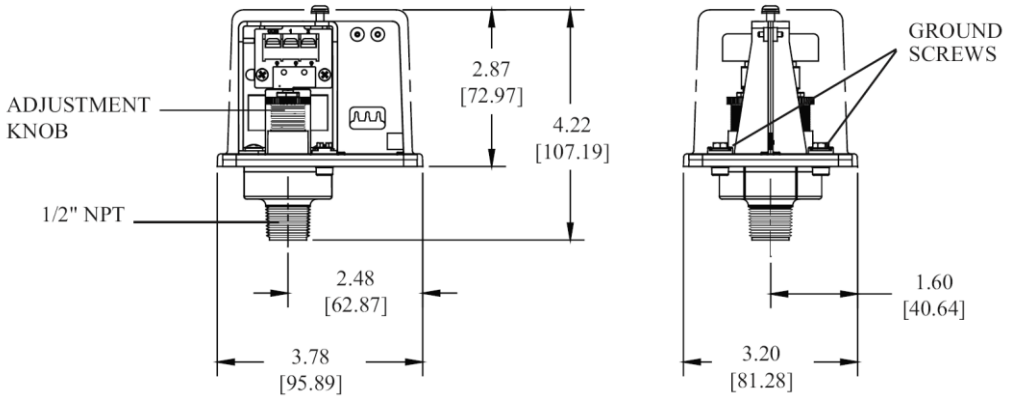

NOTE: To prevent leakage, apply Teflon tape sealant to male threads only.

INSTALLATION

The Pressure Actuated Switches model PS100 are designed primarily to detect a decrease from normal system pressure in automatic fire sprinkler systems. A typical application is for an alarm initiating device that is used on a wet system with excess pressure. The PS100-2 has two SPDT switches factory set to operate on a pressure drop at 90 PSI (6,2 BAR). See section heading Adjustments and Testing if other than factory set point is required.

1. Connect the PS100 to the system side of any shutoff or check valve.
2. Apply Teflon tape to the threaded male connection on the device. (Do not use pipe dope)
3. Device should be mounted in the upright position. (Threaded connection down)
4. Tighten the device using a wrench on the flats on the device.

WIRING INSTRUCTIONS

1. Remove the tamper resistant screw with the special key provided.
2. Carefully place a screwdriver on the edge of the knockout and sharply apply a force sufficient to dislodge the knockout plug.
3. Run wires through an approved conduit connector and affix the connector to the device. A NEMA-4 rated conduit fitting is required for outdoor use.
4. Connect the wires to the appropriate terminal connections for the service intended.

ADJUSTMENT AND TESTING


The operation of the waterflow pressure switch should be tested upon completion of installation and periodically thereafter in accordance with the applicable NFPA codes and standards and/or the authority having jurisdiction (manufacturer recommends quarterly or more frequently).

Note: Testing the PS100 may activate other system connected devices. The use of a BVL is recommended to facilitate setting and testing of the PS100 pressure switch. When a BVL (bleeder valve) is used, the pressure to the switch can be isolated and bled from the exhaust port on the BVL without effecting the supervisory pressure of the entire system.

The operation point of the PS100 Pressure Switch can be adjusted to any point between 25 and 175 psi (1,7 - 12,1 bar) by turning the adjustment knob(s) clockwise to raise the actuation point and counter clockwise to lower the actuation point. Both switches operate independent of each other. Each switch may be independently adjusted to actuate at any point acrosss the switch adjustment range. Initial adjustment can be made with a visual reference from the top of the adjustment knob across to the printed scale on the switch bracket. Final adjustments should be verified with a pressure gauge.


C/Alfoz de Bricia nº4 | P.I. Villalonquéjar | 09001 Burgos (Spain) | Tlfno: +34 947 28 11 08

SWITCH CLAMPING PLATE TERMINAL

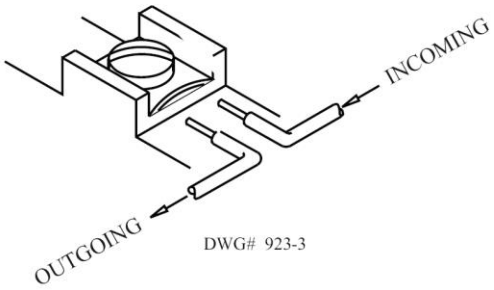



WARNING: An uninsulated section of a single conductor should not be looped around the terminal and serve as two separate connections. The wire must be severed, thereby providing supervision of the connection in the event that the wire becomes dislodged from under the terminal.

TYPICAL SPRINKLER APPLICATIONS

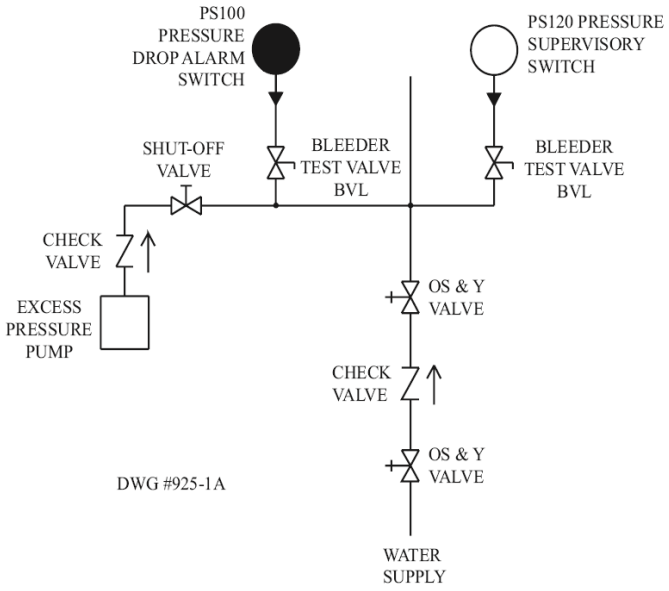


TYPICAL CONNECTIONS

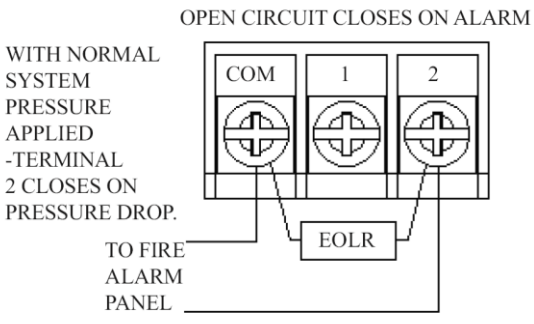

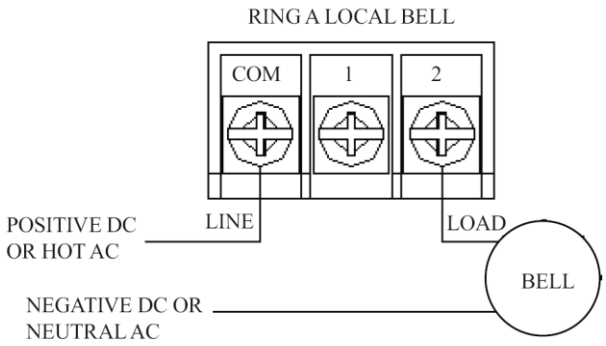


C/Alfoz de Bricia nº4 | P.I. Villalonquéjar | 09001 Burgos (Spain) | Tlfno: +34 947 28 11 08


LOW PRESSURE SIGNAL CONNECTION

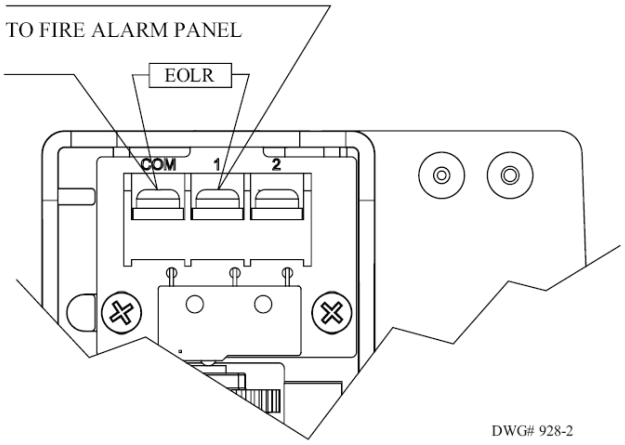

WATERFLOW SIGNAL CONNECTION

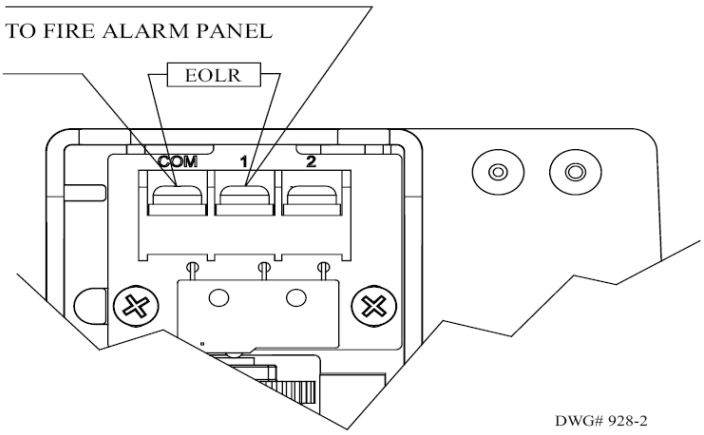


ONE CONDUIT WIRING

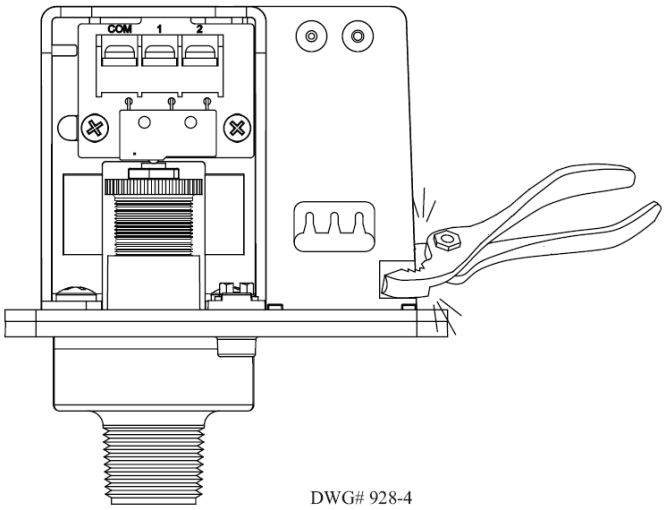

Break out thin section of divider to provide path for wires when wiring both switches from one conduit entrance.


C/Alfoz de Bricia nº4 | P.I. Villalonquéjar | 09001 Burgos (Spain) | Tlfno: +34 947 28 11 08

LOCAL BELL FOR WATERFLOW CONNECTION

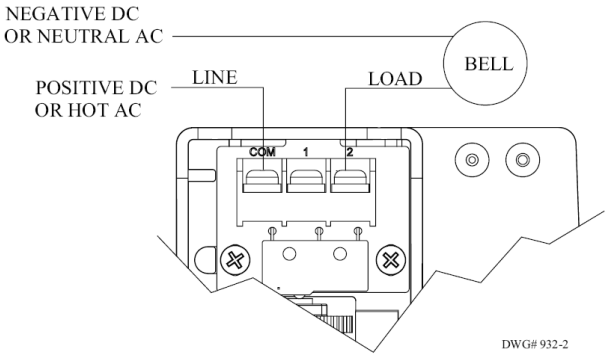

CHANGING PRESSURE


(With normal system pressure)

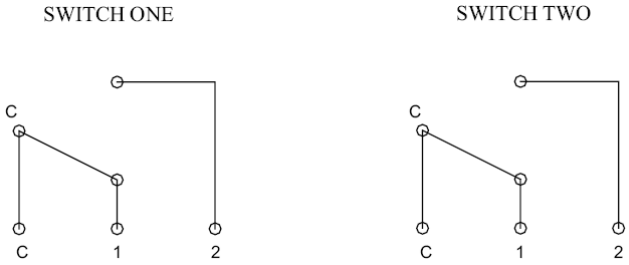

#1: Closed under normal system pressure.

#2: Open under normal system pressure, closes on pressure drop. Use as waterflow detector.

KNOCKOUT REMOVAL

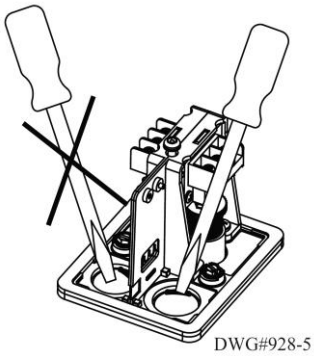

WARNING:

•Installation must be performed by qualified personnel and in accordance with all national and local codes and ordinances.

•Shock hazard. Disconnect power source before servicing. Serious injury or death could result.

•Read all instructions carefully and understand them before starting installation. Save instructions for future use. Failure to read and understand instructions could result in improper operation of device resulting in serious injury or death.

•Risk of explosion. Not for use is hazardous locations. Serious injury or death could result.

C/Alfoz de Bricia nº4 | P.I. Villalonquéjar | 09001 Burgos (Spain) | Tlfno: +34 947 28 11 08

CAUTION:

•Do not tighten by grasping the switch enclosure. Use wrenching flats on the bushing only. Failure to install properly could damage the switch and cause improper operation resulting in damage to equipment and property.

•To seal threads, apply Teflon tape to male threads only. Using joint compounds or cement can obstruct the pressure port inlet and result in improper device operation and damage to equipment.

•Do not over tighten the device, standard piping practices apply.

ORDERING INFORMATION

MODEL	CODE
PS100-2	SY1341005

Specify:

Model	
Quantity	

The equipment presented in this data sheet is to be installed in accordance with the latest published Standards of the national fire protection association (NFPA), FM Global, LPCB, VdS or other similar organizations, also with the provisions of governmental codes or ordinances whenever applicable.
This documentation is not contractual. AG Fire Sprinkler reserves the right to any kind of change without notice.

C/Alfoz de Bricia nº4 | P.I. Villalonquéjar | 09001 Burgos (Spain) | Tlfno: +34 947 28 11 08